

LIMITED WARRANTY

This product is guaranteed for a period of 12 months from date of purchase for material or manufacturing defects. Certificate of guarantee must be filled out completely by resale dealer and must accompany equipment along with the receipt, in case it is submitted for repair. Guarantee consists in guaranteed substitution of defective parts. Guarantee is considered void in case of improper use, nor does it answer to damages caused by improper handling or negligence on the part of the buyer. All equipment must be sent postage paid.

DISTRIBUTED BY:




SKIMMER

OWNER'S MANUAL

Model:SK-30 SK-40

INTRODUCTION

Jebao Skimmer are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in this manual may result in Skimmer damage and/or serious injury. Be sure to read and save this manual for future reference.

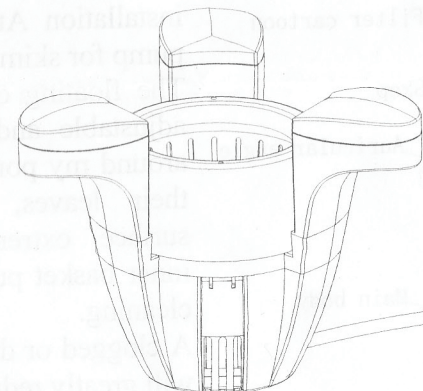

WARNING

- This Skimmer is supplied with a grounding conductor and a grounding type attachment plug. To reduce risk of electric shock, connect only to a properly grounded outlet.
- Do not remove the grounding pin from the plug.
- Do not connect to any voltage other than that shown on the Skimmer.
- Do not Skimmer flammable liquids.
- The Skimmer floated water superficial, but the pump must submersible
- Do not use with water above 35°C.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

CAUTION

Always disconnect from electrical outlet before handling the Skimmer.


Don't operate without water.

Do not lift the Skimmer by the power cord.

Operate in freshwater only.

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

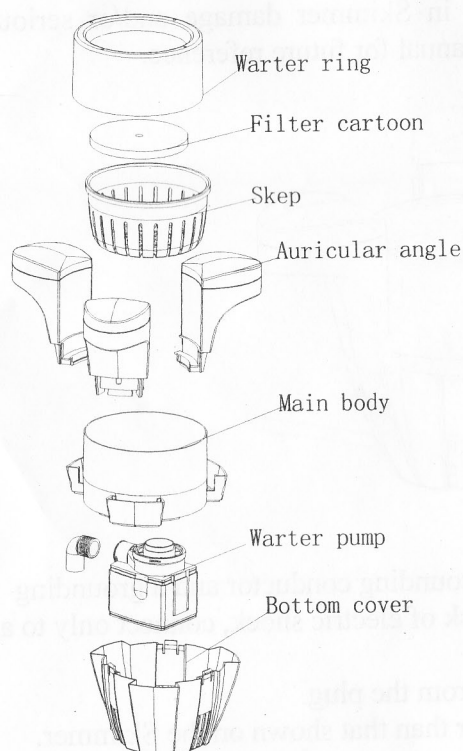

INSTALLATION AND PERFORMANCE

Please according to the Figure 1 installation Attaches onto filter pump for skimming

The floating of the skimmer is adjustable and when the trees around my pond started to drop their leaves, it cleared the surface extremely well. The inner basket pulls out easily for cleaning.

A clogged or dirty intake screen will greatly reduce performance. If the Skimmer is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake.

The Skimmer is to be supplied through a residual current device (RCD) with a rated residual operating current not exceeding

30mA.

MAINTENANCE

To clean Attaches onto filter pump for skimming, remove the back cover and the impeller.(see figure 2)

Use a small brush or stream of water to remove any debris

CAUTION: The pump shaft can not be removed. IF THE PUMP FAILS TO OPERATE, CHECK THE FOLLOWING:

- Check the circuit breaker and try another outlet to ensure the Skimmer is getting electrical power. NOTE: Always disconnect from electrical outlet before handling the Skimmer.
- Check the Skimmer discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.
- Check the inlet to ensure it is not clogged with debris.
- Remove the skimmer inside pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- Monthly maintenance will add to your Skimmer's life. NOTE: Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop" This will prevent water from running down the cord into the electrical outlet.

Figure 2

